


GTD

GTD-F4 II BEAM

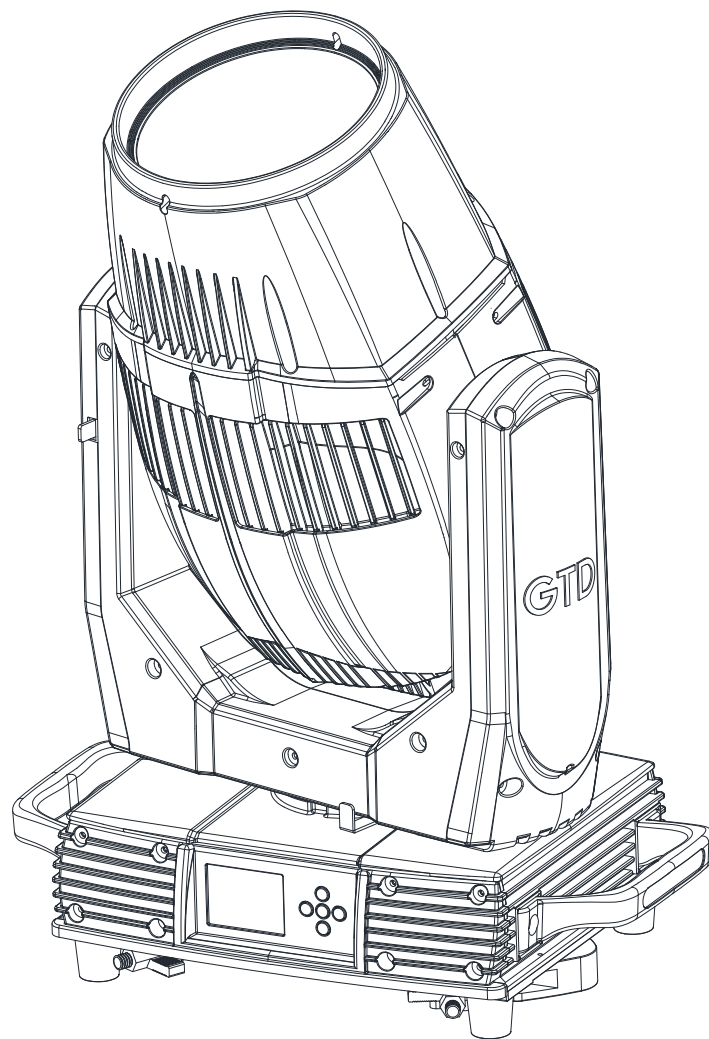

User Manual

GTD all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. GTD logo and identifying product names and numbers herein are trademarks of GTD. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-GTD brands and product names are trademarks or registered trademarks of their respective companies.

GTD and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Guangzhou GTD Culture & Technology Group Co., Ltd.

Tel: +86 20 61808296 | Fax: +86 20 61812282

www.gtd-lighting.com | contact@gtd-lighting.com

Add: No. 10, Yongli Road, Xinya Street, Huadu Dist., Guangzhou, 510800, P.R.China



Facebook

Contents

1. Safety instructions	1
2. Product introductions.	3
2.1 Dimensions	3
2.2 Fixture overview	4
2.3 Accessories	4
3. Packing and shipping	5
3.1 Protection lock	5
3.2 Unpacking	5
3.3 Packing after use	5
4. Installation	6
4.1 Clamps installation	6
4.2 Device installation	6
5. Power / Control connection	7
5.1 Power connection	7
5.2 Control connection	7
5.3 Testing	7
6. Control panel	8
6.1 Panel instruction	8
7. Technical specification	8
8. Gobos and colors.....	11
8.1 Gobos.....	11
8.2 Colors.....	11
9. Menu structure	12
10. DMX protocol.....	15
11. System wiring diagram	26
12. Maintenance and Troubleshooting	27
12.1 Cleaning and maintenance	27
12.2 Troubleshooting	27

1. Safety instructions

Before using the fixture, read the latest version of the product user manual, paying particular attention to the safety instructions. Please check www.gtd-lighting.com for the latest revision/update of the user manual.



The manufacture of this fixture, are not responsible for damages, resulting from misuse of this fixture, due to the disregard of the information printed in this user manual.



DANGER!

Hazardous voltage. Risk of lethal or severe electric shock.



WARNING!

Wear protective eyewear. Never look directly into the light source.



WARNING!


Burn hazard. Hot surface. Do not touch.



Only to direct mounting on non-combustible surfaces.



Replace all cracked glass shields.



Minimum distance to lighted objects.

$t_a \dots ^\circ\text{C}$

Maximum ambient temperature.

$t_c \dots ^\circ\text{C}$


Maximum temp of the external surface.

General guidelines ⚠


- This product has a protection rating of IP66.
- Never open this fixture while in use.
- The fixture should be kept clean. DO NOT operate the fixture in extreme heat or dusty environments. Avoid contact with chemical liquid.
- Minimum distance to lighted objects must be 49.21feet (15m).
- Maximum temp of the external surface 194°F (90°C).
- Maximum ambient temperature 113°F (45°C).
- Minimum distance of inflammable materials from the surface 1.6 feet (0.5m).
- Lamp should be changed if damaged or distorted in shape due to extreme heat.
- Cover, prism or LCD Menu Function Display with visible damages such as cracks or scratches must be replaced to ensure performance of the fixture.
- Disconnect the fixture from power before changing any parts or accessories.
- Basic insulation should be maintained between the controllable device and the product power supply.
- Make sure that the installation area can hold a minimum point load of 10 times the weight of all installed fixtures, clamps, cables, auxiliary equipment, etc. Check that the cover, clamps and locks are undamaged. Certified safety cables must always be used when installing the fixture.
- The fixture is only intended for installation, operation and maintenance by qualified professional. Instructions stated in the manual must be complied.
- The fixture must be kept in a well-ventilated place at least 50 cm away from any wall surface. Check if the fans or ventilation openings are unblocked.
- This fixture uses discharge lamp. To avoid reducing the lamp's life, wait at least 15 minutes after powering off to allow the unit to cool down before handling.
- Broken or damaged cables and light source can only be fixed or changed by certified technicians, certified local distributors or the manufacturer to ensure operational safety.
- Do not stick filters or other materials onto the lens. Do not modify the fixture or install other than GTD manufactured parts.
- For questions regarding safety operation, please contact our technical personnel or call the service hotline +8620 61808296.

2. Production instructions

2.1 Dimensions

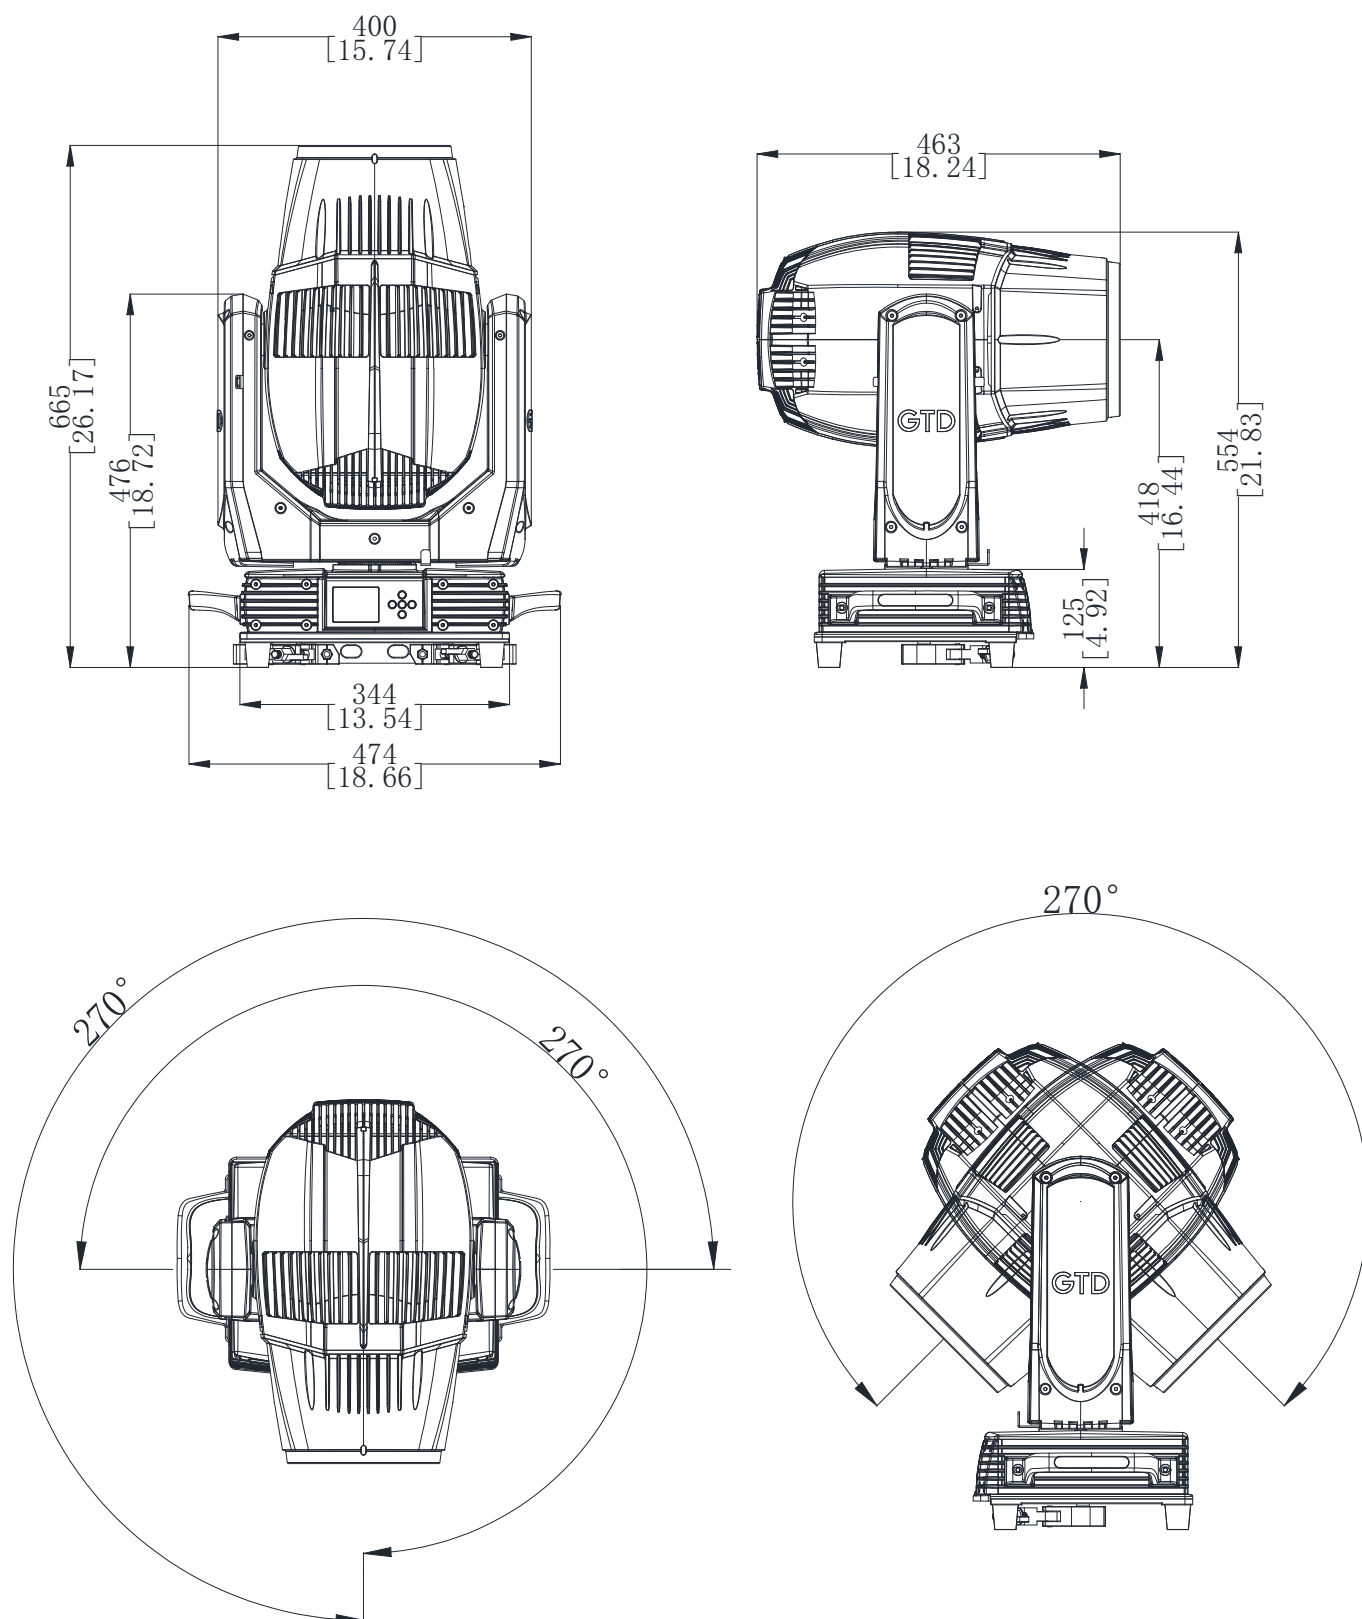

2.2 Fixture overview

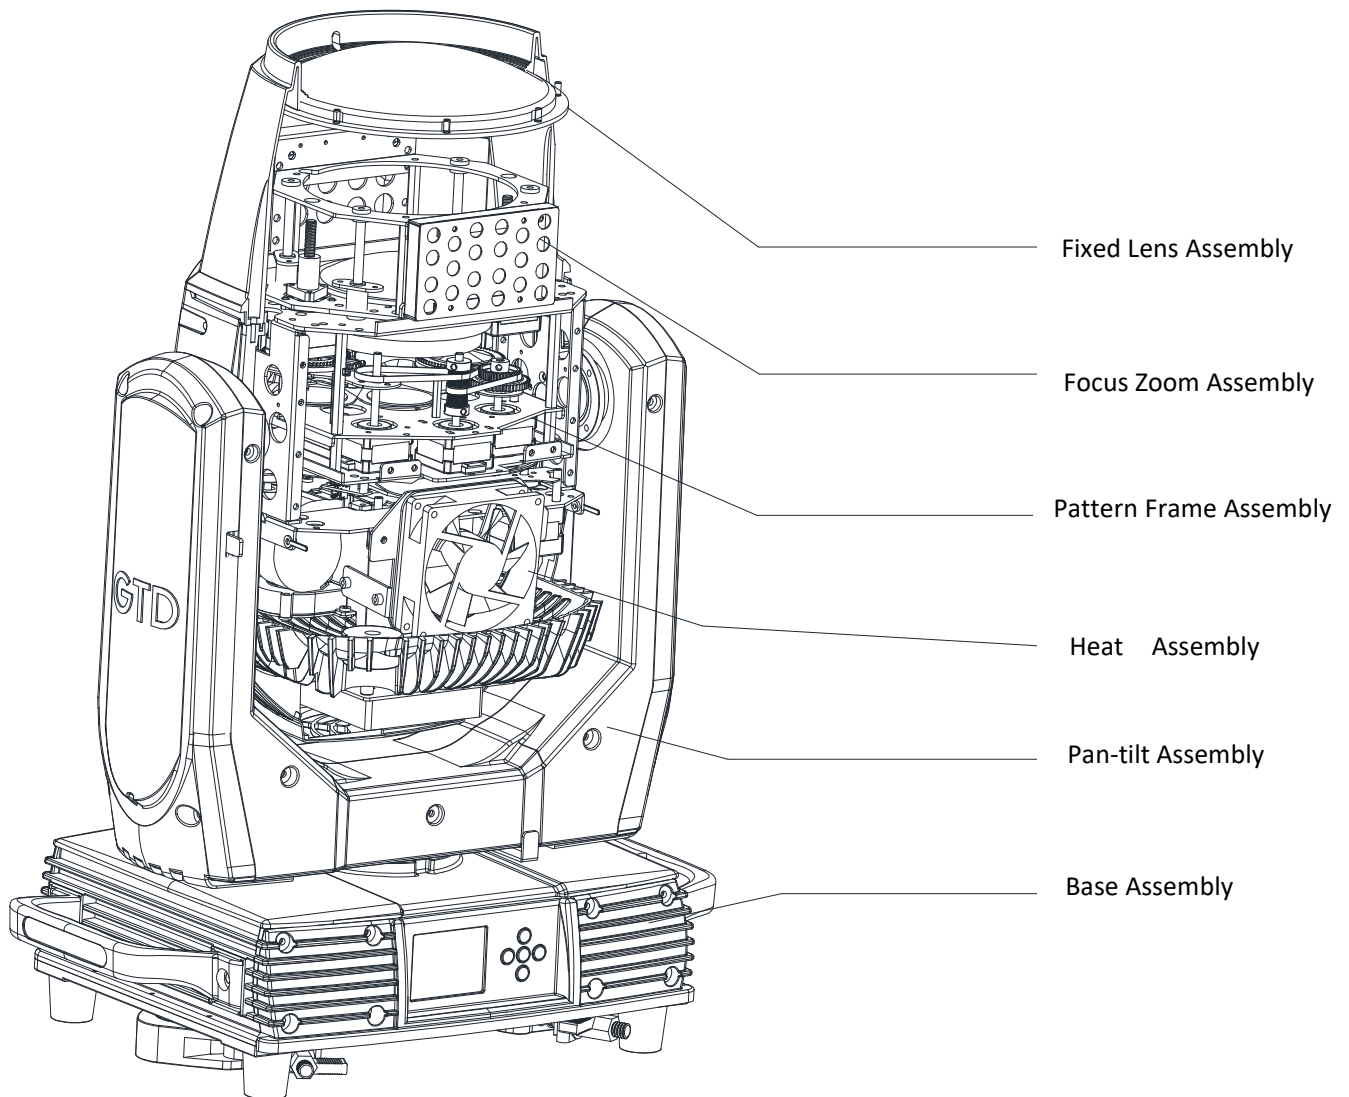

2.3 Accessories


Item	Qty	Unit	Remark
User Manual	1	Pc	--
Safety cable	1	Pc	--
Power line	1	Pc	3*2.5mm ² , 1.5m
3-pins signal line	1	Set	5m

3. Packing and shipping

3.1 Protection lock

Pan and tilt locks are equipped to ensure safe transportation.

The horizontal axis has 4 locking points and the vertical axis has 5 locking points.

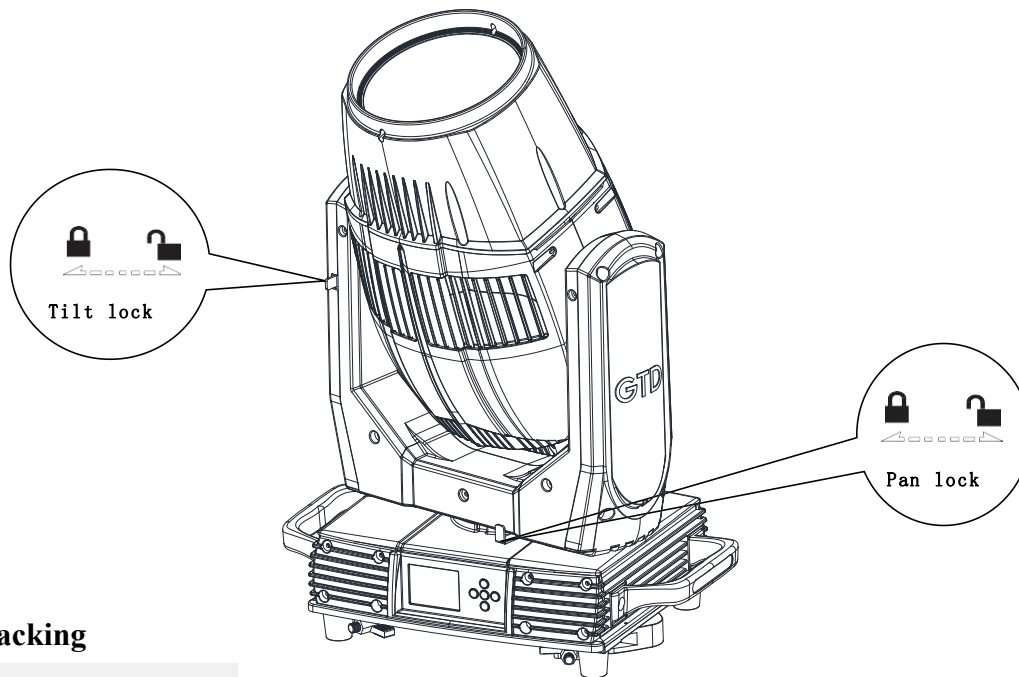

3.2 Unpacking

⚠ Notes

All products are quality controlled and checked for any faults before they are dispatched to customers. If the fixture is damaged during delivery, the customer must notify the shipper and manufacturer to file a damage insurance claim. Photographic evidence of the damage must be provided.

Flight-Case(specification: 1148*650*555mm): Open the cover of the flight-case and remove the plastic packing bags. Hold the handles of the fixture firmly and take it out carefully.

Cardboard box(specification: 605*490*640mm): Open the box and take out the whole set of packaging foam which contains both the fixture and its accessories. Remove the foam from the top, put away the accessories, and then take out the fixture wrapped in the plastic bag.

⚠ Notes

Check if the pan and tilt are unlocked before connecting the fixture to power.

3.3 Packing after use

1. Switch off the fixture and wait for at least 5 minutes before disconnecting it from AC power. Cool down the fixture for at least 15 minutes before packing.
2. Lock pan and tilt.
3. Flight case: Wrap the fixture in plastic bags. Hold it by the handles, and then carefully place it inside the flight case along with all the accessories. Close the cover. Only 3 layers are allowed when piling up the flight cases. Do not upside down.

4. Cardboard box: Wrap the fixture in plastic bags. Put it in the packaging foam along with all the accessories. Place the other set of packaging foam on top then carefully put it inside the cardboard box.

4. Installation


4.1 Clamps installation

The fixture is equipped with an integrated folding hook. By rotating and opening the hook, it can be installed on the stage or any direction of the truss.


Warning : The fixture must be fixed with two hooks, and a safety rope must be added and connected to the base hole. Be careful not to connect it to the carrying handle.

4.2 Device installation

1. Make sure there is no damage on the clamps or safety cables before installation.

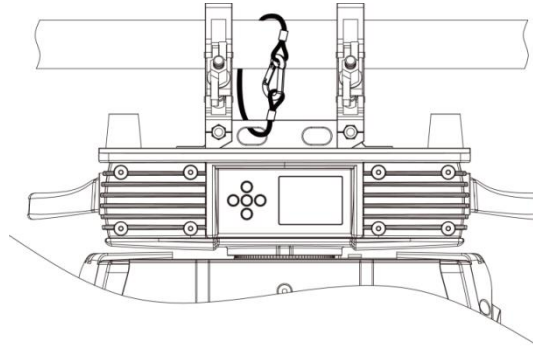

2. The hook is installed on the base of the fixture. If hanging is required, rotate and open the hook to securely lock it onto the truss.
3. Check if pan is unlocked before connecting the unit to AC power.

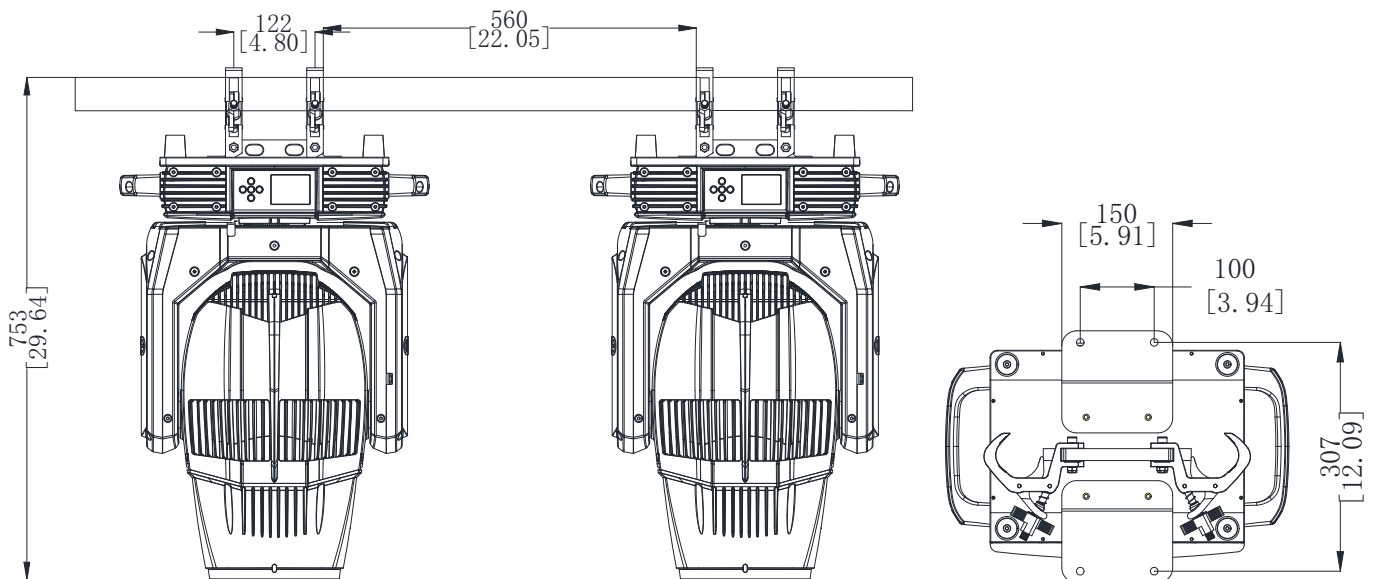

5. Power/ Control connection


5.1 Power connection

Connection method:


- L (Live) Brown wire
- E (Earth) Yellow / Green bi-color wire
- N (Neutral) Blue wire
- The voltage and frequency of the power source must be in compliance with the ones marked on the fixture. It is strongly recommended that each fixture are to be connected to the power source separately so that they can be switched on / off individually.

5.2 Control connection

The fixture has 3-pin XLR connectors for DMX data input and output as shown below. Connection between the console and fixture, and between fixtures must be made with 2 core screened DMX signal cable. Maximum connecting distance of signal cable is 150 meters. Additional DMX512 signal-amplifier is recommended for longer distance

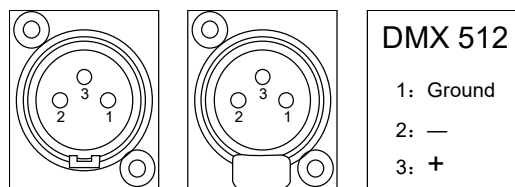

Connect the Console's DMX OUTPUT to the first fixture's DMX INPUT, then the first fixture's DMX OUTPUT to the second fixture's DMX INPUT and so on. It is recommended not to connect more than 32 units on a single DMX universe. On the last fixture's output connect a DMX terminator. (The terminator is a 3-pin XLR connector with a 1/4W and 120Ω resistor between the pin 2 and pin 3) as shown below:

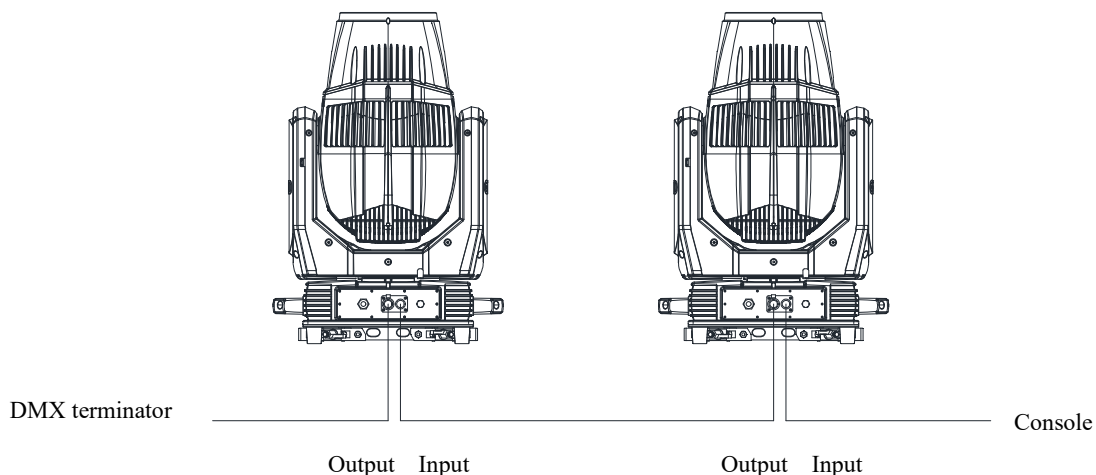


5.3 Testing

Connect the fixture to AC power. Check if the lamp is on and the fixture is independently controllable before putting into operation.

6. Control panel

6.1 Panel instruction

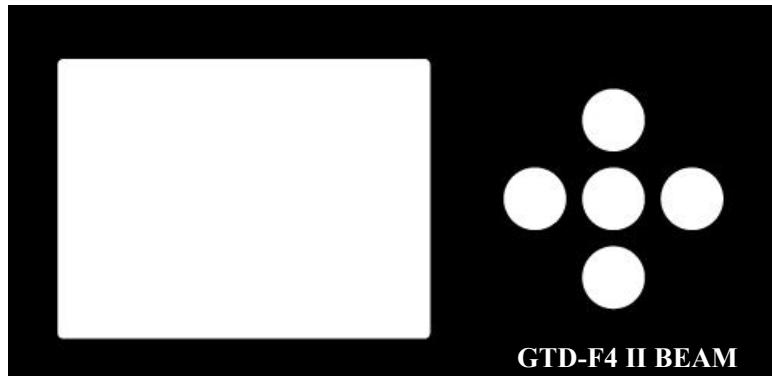

- The control panel features touch-sensitive buttons and LCD digital display for quick and easy setup of address code and functions menu.
- Press UP or DOWN to view or select the function menu.
- Press CENTER to choose a function and enter into corresponding sub menu. Each menu represents a specific function of the fixture.
- Press RIGHT to select the specific function and save the changes or enter into the submenu, then press UP or DOWN to change the value of the selected function (increase or decrease).
- Press RIGHT to return to the previous menu or exit.

7. Technical specification

- **Optical**

Light source: LE sheet MSD Platinum 19 R LL 420W

Expected average lifetime: 5000 h

Color temperature correction: 7500K

Zoom: 1.6°

CRI : Ra≥80

Focus: High-precision glass lenses, electronic linear HD focus

Prism: 2 prisms, can be controlled independently for effects, also be used in combination.

Frost: 1-independent frost effect

- **Gobo**

Fixed gobo wheel: 9 gobos + open , CW/CCW rotation, variable speed

- **Color**

Color wheel: 14 colors + open, split color, CW/CCW rotation, “Rainbow effect” in both directions

- **Electrical**

Power input, nominal: 100-240V~ 50Hz

Max. Power consumption: 610W, max current: 3.29A, PF: ≥ 0.928

Power supply unit: Auto-ranging electronic SMPS

Main fuse: 250V/6.3A

Power input: Waterproof Socket / Direct Cable (Input/Output)

DMX data input/output: Chassis 3-pin (in/out)

- **Control and programming**

Control channels (DMX): 16/13/17

Protocol: DMX-512 RDM

Display: LCD

- **Physical / Installation**

Weight: 26kg

IP rating: IP66

Material: Plastic, Aluminum, Copper, Steel

Mounting points: attachment points for safety wire

- **Dynamic effects**

Pan/Tilt movement: 540°/270°

Iris: Motorized adjustable iris, wide range of variable pulse effects

Strobe: 1-20Hz, synchronized, pulse effects

Dimmer: 0-100%, mechanical dimming

- **Thermal**

Operating range: 5°F to 113°F (-15°C to +45°C)

Storage range: -40°F to 140°F (-40°C to +60°C)


Cooling: Active fan

- **Certification and Safety**

EMC: EN 55103-1:2009, EN 55103-2:2009, EN 61000-3-2:2006+A2:2009, EN 61000-3-3:2013, GB/T 17743-2007, GB 17625.1-2012

Safety: EN 60598-2-17:1989/A2:1991, GB 7000.1-2015, GB 7000.217-2008

- **Photometric**

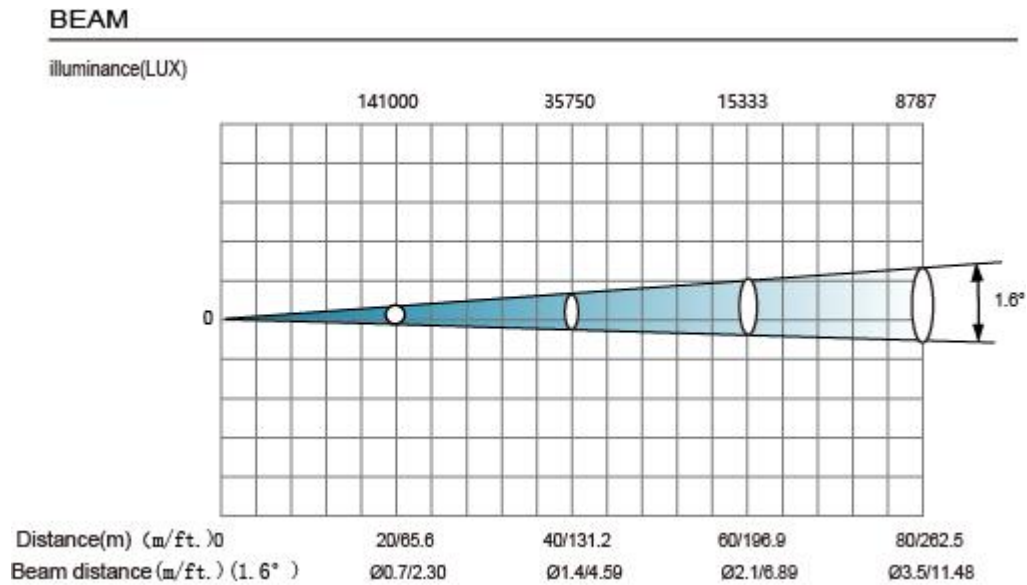

- **Other features**

- Automatic energy saving: when the shutter or CMY is closed, power consumption will be reduced automatically with the photoelectric tracking induction technology.
- Sleep mode: uses the most advanced technology to activate sleep mode remotely. When the fixture is disconnected from signal, the sleep mode is enabled automatically to make it more stable and safer. Sleep time can be customized.
- Communications Design : DMX wired/wireless transmission, bidirectional-control technology, upgrade the software quickly and conveniently by using DMX cable.
- Thermal design: The wind drainage and intelligent temperature monitoring technology can monitor lighting's state : on /off. It can adjust the thermal design by the position's temperature of lighting so that the temperature can be controlled.

8. Gobos and colors

8.1 Gobos


One fixed gobo wheel: 9 gobos + open, CW/CCW rotation, variable speed



Fixed gobo wheel

8.2 Colors

Color wheel: 14 colors + open, split color, CW/CCW rotation, “Rainbow effect” in both direction

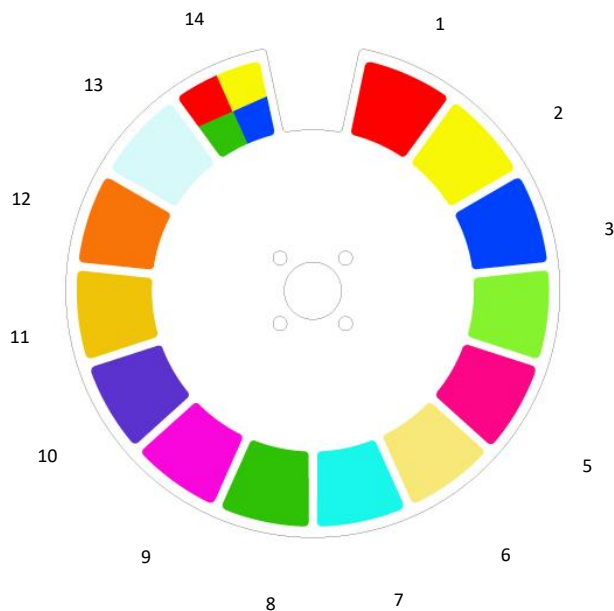

1. Red	2. Yellow	3. Blue	4. Yellow green	5. Purplish red	6. Light yellow
7. Blue green	8. Green	9. Rose red	10. Light purple blue	11. Brown yellow	12. Brown
13. Cool color	14. Red Yellow Blue Green				

9. Menu structure

Level 1	Level 2	Level 3	Level 4	Info
Run setting	Address Setting Value Display Auto-Program	Address: 001~ XXX Pan, All, No Master/Alone		Setting the DMX address Display the channel value Run auto program in master or slave
Device Info	Time Info	This Time Total Time Last Time Lamp On Time Lamp Off Time Last Time Code Clear Last Time Lamp Time Code Clear Lamp Time	XXXXXXX Hour XXXXXXX Hour XXXXXXX Hour XXXXXXX Hour XXXXXXX Minute Password: xxx(xx) Yes/No Password: xxx(xxx) Yes/No	Since power on time Product total run time Last product run time Lamp on time Lamp close time Clear last time password Clear last time Clear lamp time password Clear lamp time
	Temperature	Body Temperature	XXX 'C/'F	Body temperature
	Fans Info	NO/...		
	Err Info	No Err/...		
	Software Version	XX RDM Code0032-xxxxxx		The software version and RDM code
Lamp Control	Lamp On/Off Power On Lamp On Console Lamp On Console Lamp Off Lamp On Temp. Lamp Off Temp.	On/Off Enable/Disable Enable/Disable Enable/Disable 20~79, 45'C /68~174 , 113'F 80~139, 130'C/176~282,266'F		Open lamp Power on open lamp Console open lamp Console close lamp Open lamp below temperature Close lamp above temperature
System Setting	Status Setting	Console Set Addr No Signal Status Pan Reverse Tilt Reverse Pan Scan Degree Scan Feedback	Enable/Disable Off/Hold/Auto/Music Enable/Disable Enable/Disable 360/540 Enable/Disable	Address can be changed by console The status while no signal Pan Reverse Tilt Reverse Pan Scan Degree

		Standby Time	Disable/1~20 Min, 30	Scan Feedback Standby time
	Fan Speed	Smart Mode High Speed Mode Silent Mode		Auto fans speed Fans high speed Fans low speed
	Display Setting	Backlight Time Keyboard Lock Brightness Set Language Auto Screen Set	1~80 Min/Disable Enable/Disable 15%~100% 80% Chinese/English on/off/Auto	Backlight off time Press <menu> 3s to unlock Brightness Set Change the language Screen display upside down
	Temperature Unit	Celsius Fahrenheit		Temperature unit
	Value Default	Pan.....	Pan =XXX	The default value
	Wireless Dev	Wireless Off Wireless On Wireless Trans. Wireless Reset		Wireless off Wireless on Wireless transfer DMX data to another Wireless reset
	Dimmer Mode	M0:...~M5:... M1		Dimmer mode select
	Restore Default	Restore/Cancel		Restore to default value
Motor Reset	System Reset Scan Reset Color Reset Gobo Reset Strobe Reset Other Reset			System reset Pan and tilt motor reset color motor reset gobo motor reset strobe motor reset other motor reset
Channel Adjust	Test Mode	Pan.....		Every channel test
	Manual Mode	Pan :	Pan =XXX :	Manual control
	Adjust Mode	Input Password Pan :	Password=XXX(xx) Pan=XXX :	The password of adjust mode Fixed all begin position

Channel Setting	Channel Mode	Standard Mode Simplified Mode Extended Mode Custom Mode A Custom Mode B Custom Mode C		Standard channel mode Simplified channel mode Extended channel mode Custom channel mode A Custom channel mode B Custom channel mode C
	Set Custom Mode1 Set Custom Mode2 Set Custom Mode3	Max Channel Pan :	Channel = XX Pan = CH01 :	Change the channel order
Program Edit	Select Group	Program Unit 1 Program Unit 2 Program Unit 3	Auto-Program 1 ~10 Auto-Program 1 ~10 Auto-Program 1 ~10	Choose build-in program for slave 1 Choose build-in program for slave 2 Choose build-in program for slave 3
	Program Edit	Auto-Program1 : Auto-Program10	Program Test Step 1=Scene xxx Step 64=Scene xxx	Test the auto program The start scene of the program The end scene of the program
	Scene Edit	Scene Edit:001-250	Pan,..... (Pan=xxx) Scene T: (=xxxS) Rec. Outside	Edit the channel DMX Edit the scene time Get scene DMX form console
	Record Scene	Scene XX->XX		Record scene form console

*Settings high lighted in light grey are default values

10. DMX Protocol

Standard

DMX mode	Name	DMX value		DMX percentage		Function	Default DMX Value
Standard (16ch)							
1	Pan	0	255	0.0%	100.0%	Pan	0(0%)
2		0	65535	0.0%	100.0%	Pan, fine (LSB)	
3	Tilt	0	255	0.0%	100.0%	Tilt	46 (18.0%)
4		0	65535	0.0%	100.0%	Tilt, fine (LSB)	
5	Scan speed	0	255	0.0%	100.0%	Scan speed from fast to slow	0(0%)
6	Strobe/ Shutter	0	31	0.0%	12.2%	Closed	0(0%)
		32	63	12.5%	24.7%	Open	
		64	127	25.1%	49.8%	Synchronous strobe from slow to fast	
		128	159	50.2%	62.4%	Open	
		160	223	62.7%	87.5%	Random strobe from slow to fast	
		224	255	87.8%	100.0%	Open	
7	Intensity	0	255	0.0%	100.0%	No light → Full light	0(0%)
8		0	65535	0.0%	100.0%	Intensity fade, fine (LSB)	
9	Color wheel	0	7	0.0%	2.7%	Open	0(0%)
		8	15	3.1%	5.9%	Color 1	
		16	23	6.3%	9.0%	Color 2	
		24	31	9.4%	12.2%	Color 3	
		32	39	12.5%	15.3%	Color 4	
		40	47	15.7%	18.4%	Color 5	
		48	55	18.8%	21.6%	Color 6	
		56	63	22.0%	24.7%	Color 7	
		64	71	25.1%	27.8%	Color 8	
		72	79	28.2%	31.0%	Color 9	

		80	87	31.4%	34.1%	Color 10	
		88	95	34.5%	37.3%	Color 11	
		96	103	37.6%	40.4%	Color 12	
		104	111	40.8%	43.5%	Color 13	
		112	127	43.9%	49.8%	Color 14	
		128	187	50.2%	73.3%	Color continous rotation CW from fast to slow	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Color continous rotation CCW from slow to fast	
10	Gobo wheel (static)	0	7	0.0%	2.7%	Open gobo	0(0%)
		8	10	3.1%	3.9%	Gobo 1	
		11	13	4.3%	5.1%	Gobo 2	
		14	16	5.5%	6.3%	Gobo 3	
		17	19	6.7%	7.5%	Gobo 4	
		20	22	7.8%	8.6%	Gobo 5	
		23	25	9.0%	9.8%	Gobo 6	
		26	28	10.2%	11.0%	Gobo 7	
		29	31	11.4%	12.2%	Gobo 8	
		32	34	12.5%	13.3%	Gobo 9	
		35	37	13.7%	14.5%	Gobo 10	
		38	40	14.9%	15.7%	Gobo 11	
		41	43	16.1%	16.9%	Gobo 12	
		44	46	17.3%	18.0%	Gobo 13	
		47	48	18.4%	18.8%	Open gobo	
		49	54	19.2%	21.2%	Gobo 1 shake	
		55	60	21.6%	23.5%	Gobo 2 shake	
		61	66	23.9%	25.9%	Gobo 3 shake	
		67	72	26.3%	28.2%	Gobo 4 shake	
		73	78	28.6%	30.6%	Gobo 5 shake	
		79	84	31.0%	32.9%	Gobo 6 shake	

		85	90	33.3%	35.3%	Gobo 7 shake	
		91	96	35.7%	37.6%	Gobo 8 shake	
		97	102	38.0%	40.0%	Gobo 9 shake	
		103	108	40.4%	42.4%	Gobo 10 shake	
		109	114	42.7%	44.7%	Gobo 11 shake	
		115	120	45.1%	47.1%	Gobo 12 shake	
		121	126	47.5%	49.4%	Gobo 13 shake	
		127	127	49.8%	49.8%	Open gobo	
		128	187	50.2%	73.3%	Gobo wheel continous rotation CW from slow to fast	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Gobo wheel continous contrarotation CCW from slow to fast	
11	Focus	0	255	0.0%	100.0%	Near → Far	0(0%)
12	Prism1	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	Prism 1	
13	Prism 2	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	Prism 2	
14	Prism rotation	0	127	0.0%	49.8%	Prism indexed	0(0%)
		128	187	50.2%	73.3%	Prism continous rotation CW from slow to fast	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Prism continous contrarotation CCW from slow to fast	
15	Frost	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	On	
16	Special controls	0	9	0.0%	3.5%	No function	0(0%)
		10	19	3.9%	7.5%	Open light after 5 seconds	
		20	29	7.8%	11.4%	Close light after 5 seconds	
		30	39	11.8%	15.3%	Color wheel half color switch	
		40	49	15.7%	19.2%	Color wheel random positioning	
		50	59	19.6%	23.1%	Reserved	

		60	69	23.5%	27.1%	Reset all motor after 5 seconds	
		70	79	27.5%	31.0%	Scan motor reset after 5 seconds	
		80	89	31.4%	34.9%	All color motor reset after 5 seconds	
		90	99	35.3%	38.8%	All gobo motor reset after 5 seconds	
		100	109	39.2%	42.7%	All strobe motor reset after 5 seconds	
		110	119	43.1%	46.7%	Other motor reset after 5 seconds	
		120	129	47.1%	50.6%	Built-in program 1	
		130	139	51.0%	54.5%	Built-in program 2	
		140	149	54.9%	58.4%	Built-in program 3	
		150	159	58.8%	62.4%	Built-in program 4	
		160	169	62.7%	66.3%	Built-in program 5	
		170	179	66.7%	70.2%	Built-in program 6	
		180	189	70.6%	74.1%	Built-in program 7	
		190	199	74.5%	78.0%	Built-in program 8	
		200	209	78.4%	82.0%	Built-in program 9	
		210	219	82.4%	85.9%	Built-in program 10	
		220	245	86.3%	96.1%	Reserved	
		246	247	96.5%	96.9%	Fan smart mode	
		248	249	97.3%	97.6%	Fan high speed mode	
		250	251	98.0%	98.4%	Fan silent mode	
		252	255	98.8%	100.0%	Reserved	

Basic

DMX mode	Name	DMX value		DMX percentage		Function	Default DMX Value
Basic (13ch)							
1	Pan	0	255	0.0%	100.0%	Pan	0(0%)
2	Tilt	0	255	0.0%	100.0%	Tilt	46 (18.0%)
3	Scan	0	255	0.0%	100.0%	Scan speed from fast to slow	0(0%)

	speed						
4	Strobe/ Shutter	0	31	0.0%	12.2%	Closed	0(0%)
		32	63	12.5%	24.7%	Open	
		64	127	25.1%	49.8%	Synchronous strobe from slow to fast	
		128	159	50.2%	62.4%	Open	
		160	223	62.7%	87.5%	Random strobe from slow to fast	
		224	255	87.8%	100.0%	Open	
5	Intensity	0	255	0.0%	100.0%	No light → Full light	0(0%)
6	Color wheel	0	7	0.0%	2.7%	Open	0(0%)
		8	15	3.1%	5.9%	Color 1	
		16	23	6.3%	9.0%	Color 2	
		24	31	9.4%	12.2%	Color 3	
		32	39	12.5%	15.3%	Color 4	
		40	47	15.7%	18.4%	Color 5	
		48	55	18.8%	21.6%	Color 6	
		56	63	22.0%	24.7%	Color 7	
		64	71	25.1%	27.8%	Color 8	
		72	79	28.2%	31.0%	Color 9	
		80	87	31.4%	34.1%	Color 10	
		88	95	34.5%	37.3%	Color 11	
		96	103	37.6%	40.4%	Color 12	
		104	111	40.8%	43.5%	Color 13	
		112	127	43.9%	49.8%	Color 14	
		128	187	50.2%	73.3%	Color1 continous rotation CW from fast to slow	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Color1 continous rotation CCW from slow to fast	
7	Gobo wheel (static)	0	7	0.0%	2.7%	Open gobo	0(0%)
		8	10	3.1%	3.9%	Gobo 1	
		11	13	4.3%	5.1%	Gobo 2	

		14	16	5.5%	6.3%	Gobo 3	
		17	19	6.7%	7.5%	Gobo 4	
		20	22	7.8%	8.6%	Gobo 5	
		23	25	9.0%	9.8%	Gobo 6	
		26	28	10.2%	11.0%	Gobo 7	
		29	31	11.4%	12.2%	Gobo 8	
		32	34	12.5%	13.3%	Gobo 9	
		35	37	13.7%	14.5%	Gobo 10	
		38	40	14.9%	15.7%	Gobo 11	
		41	43	16.1%	16.9%	Gobo 12	
		44	46	17.3%	18.0%	Gobo 13	
		47	48	18.4%	18.8%	Open gobo	
		49	54	19.2%	21.2%	Gobo 1 shake	
		55	60	21.6%	23.5%	Gobo 2 shake	
		61	66	23.9%	25.9%	Gobo 3 shake	
		67	72	26.3%	28.2%	Gobo 4 shake	
		73	78	28.6%	30.6%	Gobo 5 shake	
		79	84	31.0%	32.9%	Gobo 6 shake	
		85	90	33.3%	35.3%	Gobo 7 shake	
		91	96	35.7%	37.6%	Gobo 8 shake	
		97	102	38.0%	40.0%	Gobo 9 shake	
		103	108	40.4%	42.4%	Gobo 10 shake	
		109	114	42.7%	44.7%	Gobo 11 shake	
		115	120	45.1%	47.1%	Gobo 12 shake	
		121	126	47.5%	49.4%	Gobo 13 shake	
		127	127	49.8%	49.8%	Open gobo	
		128	187	50.2%	73.3%	Gobo wheel continous rotation CW from slow to fast	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Gobo wheel continous contrarotation CCW from slow to fast	

8	Focus	0	255	0.0%	100.0%	Near → Far	0(0%)
9	Prism1	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	Prism 1	
10	Prism 2	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	Prism 2	
11	Prism rotation	0	127	0.0%	49.8%	Prism indexed	0(0%)
		128	187	50.2%	73.3%	Prism continuous rotation CW from slow to fast	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Prism continuous contrarotation CCW from slow to fast	
12	Frost	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	On	
13	Special controls	0	9	0.0%	3.5%	No function	0(0%)
		10	19	3.9%	7.5%	Open light after 5 seconds	
		20	29	7.8%	11.4%	Close light after 5 seconds	
		30	39	11.8%	15.3%	Color wheel half color switch	
		40	49	15.7%	19.2%	Color wheel random positioning	
		50	59	19.6%	23.1%	Reserved	
		60	69	23.5%	27.1%	Reset all motor after 5 seconds	
		70	79	27.5%	31.0%	Scan motor reset after 5 seconds	
		80	89	31.4%	34.9%	All color motor reset after 5 seconds	
		90	99	35.3%	38.8%	All gobo motor reset after 5 seconds	
		100	109	39.2%	42.7%	All strobe motor reset after 5 seconds	
		110	119	43.1%	46.7%	Other motor reset after 5 seconds	
		120	129	47.1%	50.6%	Built-in program 1	
		130	139	51.0%	54.5%	Built-in program 2	
		140	149	54.9%	58.4%	Built-in program 3	
		150	159	58.8%	62.4%	Built-in program 4	
		160	169	62.7%	66.3%	Built-in program 5	
		170	179	66.7%	70.2%	Built-in program 6	

		180	189	70.6%	74.1%	Built-in program 7	
		190	199	74.5%	78.0%	Built-in program 8	
		200	209	78.4%	82.0%	Built-in program 9	
		210	219	82.4%	85.9%	Built-in program 10	
		220	245	86.3%	96.1%	Reserved	
		246	247	96.5%	96.9%	Fan smart mode	
		248	249	97.3%	97.6%	Fan high speed mode	
		250	251	98.0%	98.4%	Fan silent mode	
		252	255	98.8%	100.0%	Reserved	

Extended


DMX mode	Name	DMX value		DMX percentage		Function	Default DMX Value
Extended (17ch)							
1	Pan	0	255	0.0%	100.0%	Pan	0(0%)
2		0	65535	0.0%	100.0%	Pan, fine (LSB)	
3	Tilt	0	255	0.0%	100.0%	Tilt	46(18.0%)
4		0	65535	0.0%	100.0%	Tilt, fine (LSB)	
5	Scan speed	0	255	0.0%	100.0%	Scan speed from fast to slow	0(0%)
6	Strobe/ Shutter	0	31	0.0%	12.2%	Closed	0(0%)
		32	63	12.5%	24.7%	Open	
		64	127	25.1%	49.8%	Synchronous strobe from slow to fast	
		128	159	50.2%	62.4%	Open	
		160	223	62.7%	87.5%	Random strobe from slow to fast	
		224	255	87.8%	100.0%	Open	
7	Intensity	0	255	0.0%	100.0%	No light → Full light	0(0%)
8		0	65535	0.0%	100.0%	Intensity fade, fine (LSB)	
9	Color wheel	0	7	0.0%	2.7%	Open	0(0%)
		8	15	3.1%	5.9%	Color 1	
		16	23	6.3%	9.0%	Color 2	

		24	31	9.4%	12.2%	Color 3	
		32	39	12.5%	15.3%	Color 4	
		40	47	15.7%	18.4%	Color 5	
		48	55	18.8%	21.6%	Color 6	
		56	63	22.0%	24.7%	Color 7	
		64	71	25.1%	27.8%	Color 8	
		72	79	28.2%	31.0%	Color 9	
		80	87	31.4%	34.1%	Color 10	
		88	95	34.5%	37.3%	Color 11	
		96	103	37.6%	40.4%	Color 12	
		104	111	40.8%	43.5%	Color 13	
		112	127	43.9%	49.8%	Color 14	
		128	187	50.2%	73.3%	Color1 continous rotation CW from fast to slow	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Color1 continous rotation CCW from slow to fast	
10	Gobo wheel (static)	0	7	0.0%	2.7%	Open gobo	0(0%)
		8	10	3.1%	3.9%	Gobo 1	
		11	13	4.3%	5.1%	Gobo 2	
		14	16	5.5%	6.3%	Gobo 3	
		17	19	6.7%	7.5%	Gobo 4	
		20	22	7.8%	8.6%	Gobo 5	
		23	25	9.0%	9.8%	Gobo 6	
		26	28	10.2%	11.0%	Gobo 7	
		29	31	11.4%	12.2%	Gobo 8	
		32	34	12.5%	13.3%	Gobo 9	
		35	37	13.7%	14.5%	Gobo 10	
		38	40	14.9%	15.7%	Gobo 11	
		41	43	16.1%	16.9%	Gobo 12	
		44	46	17.3%	18.0%	Gobo 13	

		47	48	18.4%	18.8%	Open gobo	
		49	54	19.2%	21.2%	Gobo 1 shake	
		55	60	21.6%	23.5%	Gobo 2 shake	
		61	66	23.9%	25.9%	Gobo 3 shake	
		67	72	26.3%	28.2%	Gobo 4 shake	
		73	78	28.6%	30.6%	Gobo 5 shake	
		79	84	31.0%	32.9%	Gobo 6 shake	
		85	90	33.3%	35.3%	Gobo 7 shake	
		91	96	35.7%	37.6%	Gobo 8 shake	
		97	102	38.0%	40.0%	Gobo 9 shake	
		103	108	40.4%	42.4%	Gobo 10 shake	
		109	114	42.7%	44.7%	Gobo 11 shake	
		115	120	45.1%	47.1%	Gobo 12 shake	
		121	126	47.5%	49.4%	Gobo 13 shake	
		127	127	49.8%	49.8%	Open gobo	
		128	187	50.2%	73.3%	Gobo wheel continous rotation CW from slow to fast	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Gobo wheel continous contrarotation CCW from slow to fast	
11	Focus	0	255	0.0%	100.0%	Near → Far	0(0%)
12		0	65535	0.0%	100.0%	Focus, fine (LSB)	
13	Prism1	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	Prism 1	
14	Prism 2	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	Prism 2	
15	Prism rotation	0	127	0.0%	49.8%	Prism indexed	0(0%)
		128	187	50.2%	73.3%	Prism continous rotation CW from slow to fast	
		188	195	73.7%	76.5%	Stop	
		196	255	76.9%	100.0%	Prism continous contrarotation CCW from slow to fast	

16	Frost	0	31	0.0%	12.2%	Off	0(0%)
		32	255	12.5%	100.0%	On	
17	Special controls	0	9	0.0%	3.5%	No function	0(0%)
		10	19	3.9%	7.5%	Open light after 5 seconds	
		20	29	7.8%	11.4%	Close light after 5 seconds	
		30	39	11.8%	15.3%	Color wheel half color switch	
		40	49	15.7%	19.2%	Color wheel random positioning	
		50	59	19.6%	23.1%	Reserved	
		60	69	23.5%	27.1%	Reset all motor after 5 seconds	
		70	79	27.5%	31.0%	Scan motor reset after 5 seconds	
		80	89	31.4%	34.9%	All color motor reset after 5 seconds	
		90	99	35.3%	38.8%	All gobo motor reset after 5 seconds	
		100	109	39.2%	42.7%	All strobe motor reset after 5 seconds	
		110	119	43.1%	46.7%	Other motor reset after 5 seconds	
		120	129	47.1%	50.6%	Built-in program 1	
		130	139	51.0%	54.5%	Built-in program 2	
		140	149	54.9%	58.4%	Built-in program 3	
		150	159	58.8%	62.4%	Built-in program 4	
		160	169	62.7%	66.3%	Built-in program 5	
		170	179	66.7%	70.2%	Built-in program 6	
		180	189	70.6%	74.1%	Built-in program 7	
		190	199	74.5%	78.0%	Built-in program 8	
		200	209	78.4%	82.0%	Built-in program 9	
		210	219	82.4%	85.9%	Built-in program 10	
		220	245	86.3%	96.1%	Reserved	
		246	247	96.5%	96.9%	Fan smart mode	
		248	249	97.3%	97.6%	Fan high speed mode	
		250	251	98.0%	98.4%	Fan silent mode	
		252	255	98.8%	100.0%	Reserved	

11. System wiring diagram

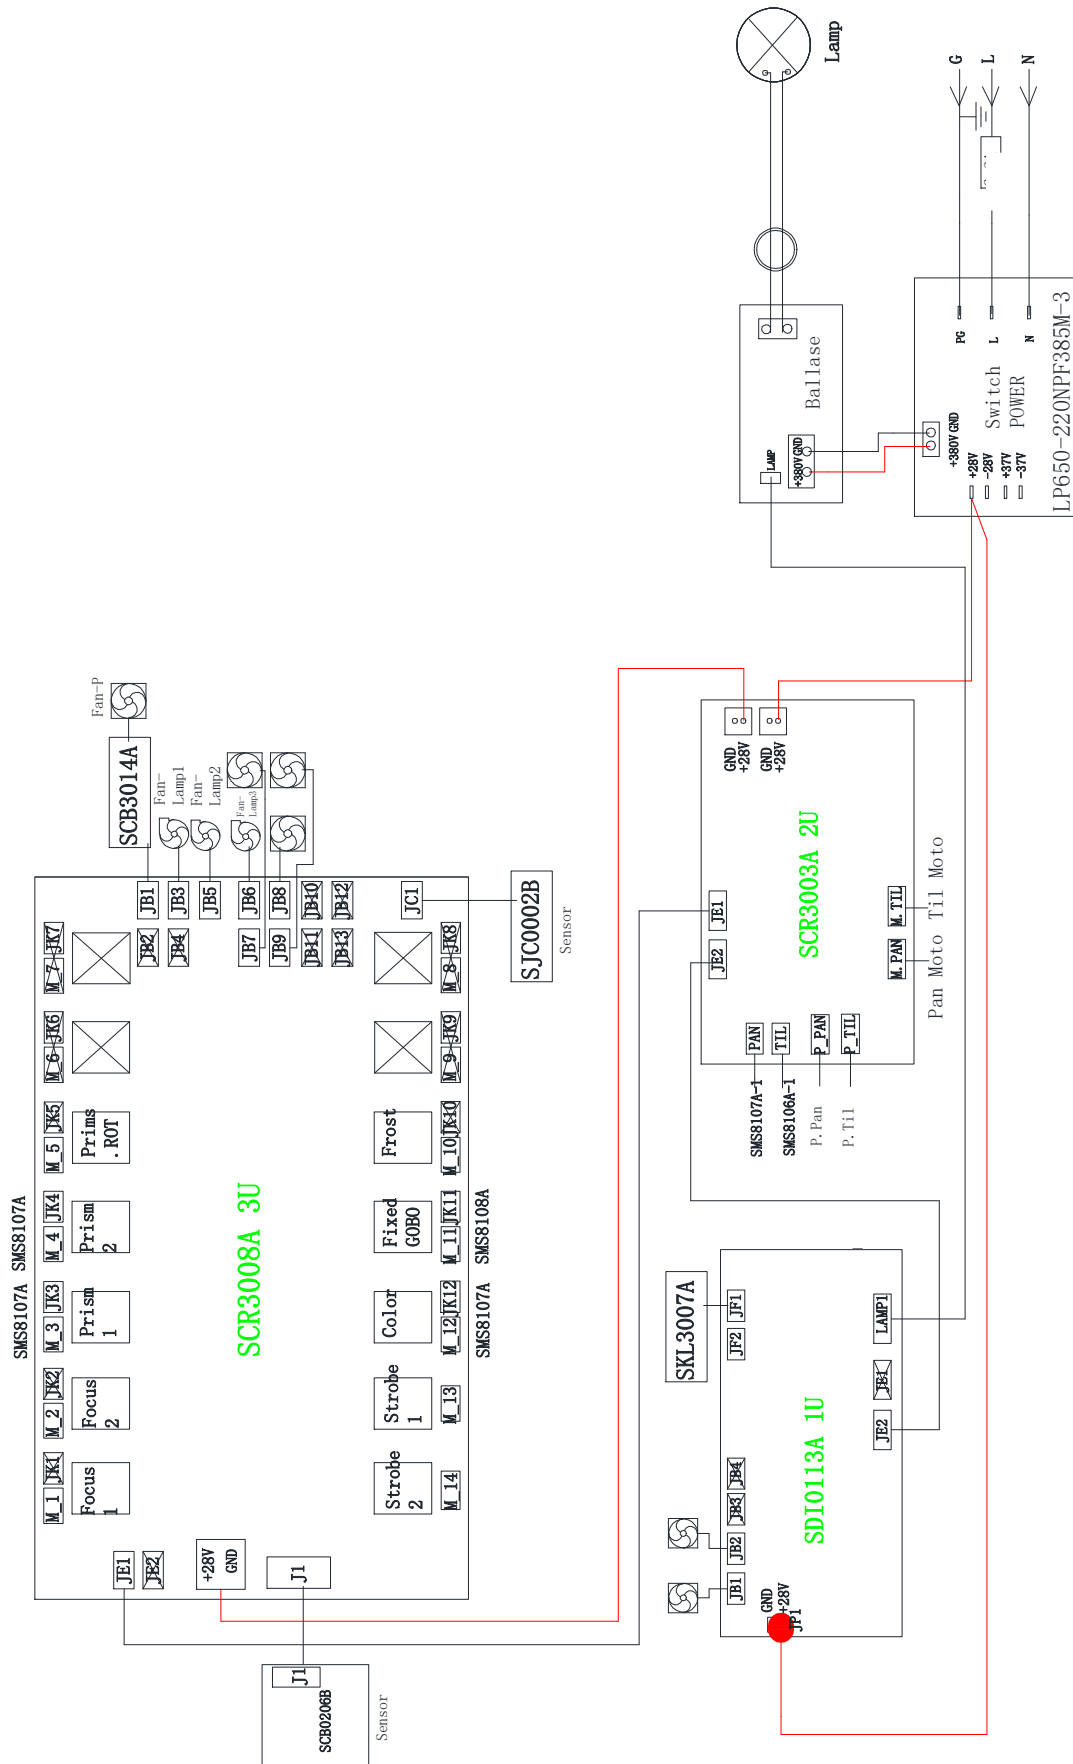

12. Maintenance and Troubleshooting

12.1 Cleaning and maintenance

It is required that the fixture should be kept clean and well maintained to ensure its reliability. Its lifespan mainly depends on the working environment and proper operation. Should you have any questions, please consult a technical engineer of GTD Lighting.



Notes: Damage resulted from dust, smoke, oil or improper use is not covered by warranty.



Notes: Disconnect the fixture from AC power, and let it cool down for at least 15 minutes before opening the housing. Make sure to use a soft cloth to clean the optical components, and be careful, as the coating is easily scratched. Do not use any organic solvent such as alcohol to clean the reflector mirror, dichroic color filters or housing of the fixture.

- If the lens is cracked or otherwise damaged, replace it immediately.
- If the lamp becomes damaged or deformed in any way it must be replaced.
- If the light from the lamp appears dim, this normally indicates that it is reaching the end of its life span and should be changed at once. Aged lamps run to the extremity of their life might explode.
- If fixture does not function, check the fuse on the power socket of the fixture. Replace the fuse of the same specification if it is blown.
- The fixture is equipped with thermal-protection device that will switch off the lamp in case of overheating. If this happens, please check that the fans are not blocked, and clean them if they are dirty. Check whether the fans are operational. If not, call a qualified technician.

12.2 Troubleshooting

Problem	Possible Cause	Suggested Correction
No response after connected to A/C power	Power switch not turned on.	Turn on power switch.
	Take out the fuse and check if it is blown.	Locate the blown fuse. Remove the broken fuse. Insert are placement fuse of the correct amperage
	Abnormal A/C input (A/C power socket, power cables, luminaire power socket).	Replace AC power socket and power cables, and then adjust power socket for proper connection.
	No DC voltage from switching power supply.	Check if the switching power supply has DC voltage output. Replace the switching power supply.
No response or wrong response to the commands of the control system	DMX cables disconnected from fixture's DATA IN connector.	Connect DMX cable to the fixture's DATA IN connector.
	Open circuit or short circuit fault in the DMX cables.	Replace DMX cables as required.
	Wrong DMX address for the fixture in the	Ensure the address in "Run setting > Address

Problem	Possible Cause	Suggested Correction
	Control system.	Setting ">Address" of the fixture is consistent with the address in the control system.
	Misuse in "Channel setting > Channel Mode" of the fixture.	Choose the channel mode in "Channel setting > Channel Mode" of the fixture as required by the user
	Malfunctioning of DMX cannon input/output connectors. No input/output voltage to the main control board of the fixture.	Troubleshooting the DMX XLR signal plate of the fixture, replace the main control board of the fixture.
The lamp does not start when switch is turned on	Normal end of lamp life.	Test the lamp in an adjacent fixture which is known to be operating properly and then replace as necessary
	Whether the function of the relay board is intact, whether the signal is normal or not.	Repair or replace.
	Shorted leads between ballast and the lamp	Replace components as required.
	Incorrect ballast output.	Check ballast output to determine if it conforms to lamp requirements. If voltage and current do not stabilize in five to ten minutes warm-up time, ballast output is incorrect and adjustment should be made. Check capacitor wiring, if visibly available, to determine if capacitors are properly wired.
	Incorrect triggers output.	Replace triggers.
The lamp is off unexpected	The fixture is in sleep mode	Should the fixture is not in active use for "standby time", the sleep mode is enabled automatically to make it more stable and safer, sleep time can be customized.
	Lamp has been operating: cool down time insufficient.	Environmental conditions such as extreme temperatures will have the fixture stop working, the lamps will require a period of time to cool and re-establish optimum starting conditions. Restart time varies with the degree of ventilation built into it, ambient temperature, and draft conditions.
	Overheat ballast resulting in premature failure or damaged ballast.	The ballast incorporate internal automatic-resetting thermal protection, which deactivates the ballast should it overheat. Normal operation resumes once the ballast has

Problem	Possible Cause	Suggested Correction
		cooled sufficiently. Burned-out or failing lamps, or high temperatures in or around the fixture, can cause the ballast to overheat, so we need solve the problem and replace components as required
	Thermostat damaged.	Replace.
Shaking, wrong position, and out of control gobo wheel	No function the connector between gobo wheel motor and drive, loose, damaged, or broken cables connecting the gobo wheel and drive.	Reconnect the gobo wheel motor to the drive, and replace cables as required.
	The gobo wheel motor's drive IC on the PCB might be out of condition.	Replace the drive having the same software version as required.
	Dislocated magnetic tube and positioning magnet, or damaged magnetic tube.	Calibrate the position of the magnetic tube to the positioning magnet, and replace magnetic tube as required
	Shaking motor, wrong rotation angle, losing step or damaged motor	Replace the motor as required.
Decreased brightness, uneven pattern projections	Normal end of lamp life.	Test the lamp in an adjacent fixture which is known to be operating properly and then replace as necessary
	The midline of the lamp is not aligned with the center point of the effect assembly (consisting of the rotating gobo wheel, static gobo wheel, color wheel, strobe, prism, and frost), focus module, and object lens.	Reinstall the lamp. Adjust the lamp position until the midline of the lamp is aligned with the center point of the effect assemblies (consisting of the rotating gobo wheel, static gobo wheel, color wheel, strobe, prism, frost, the focus adjusting module, and the object lens).
	Excessive dusts or smudges on the effect assembly, focus module and objective lens.	Follow the instructions stated in this user manual to clean the effect assembly, focus module and objective lens.
	Damaged or deformed effect assembly, focus module or objective lens.	Replace the damaged or deformed components
Wrong color	Normal end of lamp life	Test the lamp in an adjacent fixture which is known to be operating properly and then replace as necessary
	Excessive dusts or smudges on the rotating gobo wheel or color wheel.	Follow the instructions stated in this user manual to clean the rotating gobo wheel or color

Problem	Possible Cause	Suggested Correction
		wheel.
	Rotating gobo wheel, color wheel with coating wearing off, damages or deformation	Replace the worn-off, damaged or deformed rotating gobo wheel and color wheel
Non-clear shape	Excessive dusts or smudges on the rotating gobo wheel or color wheel	Follow the instructions stated in this user manual to clean the rotating gobo wheel or color wheel.
	Excessive dusts or smudges on the focus module or objective lens	Follow the instructions stated in this user manual to clean the focus module or objective lens
	Damaged or deformed focus module or objective lens.	Replace the damaged or deformed focus module or objective lens.

Guangzhou GTD Culture & Technology Group Co., Ltd.

Tel: +86 20 61808296 | Fax: +86 20 61812282

www.gtd-lighting.com | contact@gtd-lighting.com

Add: No. 10, Yongli Road, Xinya Street, Huadu Dist., Guangzhou, 510800, P.R.China



Facebook